# COMPUTER LANE MONITOR

## MANUAL READ SET -UP:

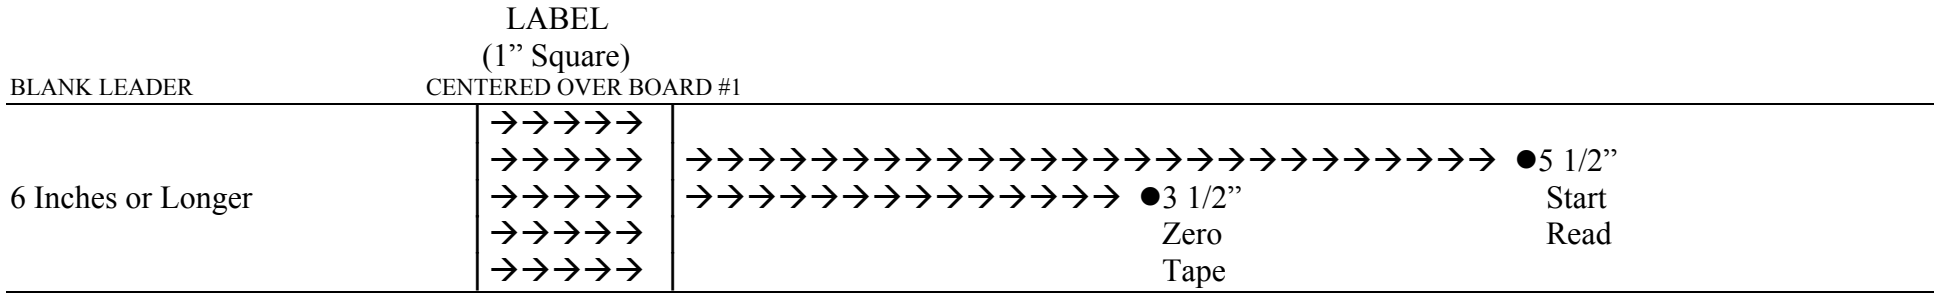


## ZERO TAPE PROCEDURE:

Insert the blank leader area of the tape into the Lane Monitor until it just engages into the drive rollers. Use the Advance Tape .21" button to move the tape to the 3 1/2 inch marked line (positioned at the front edge of the Tape In guide and not at the opening into the tape reader). As you move the tape note the **lowest repeatable Tape Value** that is displayed. Use the Reverse Tape .21" button to reposition the tape over the lowest repeatable number and then click the Take Zero Tape Reading button.

Advance the tape to the 5 1/2 inch marked line (tape should be positioned at the front edge of the Tape In guide and not at the opening into the tape reader) and click on the Start Reading Tape button.